


9.1 Accessories

Spare parts for conductor clamping device

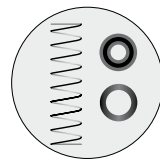

	Order No.		Order No.
Pressure spring for control valve	ERS-2 01	Hexagon screw M5 x 8	ERS-2 21
Thrust piece	ERS-2 02	Locking pin	ERS-2 22
Socket for conductor introduction	ERS-2 03	Bunch plug connector electr.	ERS-2 23
Pressure spring for clamping piston	ERS-2 04	Clamping piston compl. = Item 5 and 6	ERS-2 24
Seal for clamping piston	ERS-2 05	Label for labelling (without illustration)	ERS-2 25
Clamping piston	ERS-2 06	Threaded pin – M3 x 5	ERS-2 26
Ventilation button	ERS-2 07	Cover plate for LKV (without illustration)	ERS-2 27
O-ring for pressure rod	ERS-2 08	Cover plate for LKV, wide for push button/switch (without illustration)	ERS-2 28
PA countersunk screw – M3 x 10	ERS-2 09	Polyurethane ester hose / blue NW 3 mm / 1 m	ERS-2 29
Connection nipple, straight		Polyamide 12 w plastic hose according to DIN 73 389, outer diameter 4 mm / inner diameter 2.7 mm / black / 1 m"	
M5a – 3 mm for air plug	ERS-2 10	Teflon oil for control valve / approx. 2ml	ERS-2 50
Case ERS-2 11		Special lubricating grease for clamping piston / approx. 2ml	ERS-2 51
Sealing ring - PVC	ERS-2 12	Service Kit LKV including spare parts ERS-2 01, 03, 04, 05, 08, 17, 18, 50, 51	ERS-2 55
Connection nipple, angled	ERS-2 13	Service Kit LKT including spare parts ERS-2 03, 04, 05, 08, 18, 51	ERS-2 56
Control valve – has to be fitted by RAWE	ERS-2 14		
Pressure bar	ERS-2 15		
Hexagon screw M5 x 5 nickel plated	ERS-2 16		
Felt seal	ERS-2 17		
O-ring for locking pin	ERS-2 18		
Flat connector, angled	ERS-2 19		
Alu sealing ring	ERS-2 20		

